

P1XF001

Color Sensor



Operating Instructions

Table of Contents

1. General	4
1.1. Information Concerning these Instructions	4
1.2. Explanations of Symbols	4
1.3. Limitation of Liability	5
1.4. Copyrights	5
2. For Your Safety	6
2.1. Use for Intended Purpose	6
2.2. Use for Other than the Intended Purpose	6
2.3. Personnel Qualifications	7
2.4. Modification of Products	7
2.5. General Safety Precautions	7
2.6. Laser/LED Warnings	7
2.7. Approvals and IP Protection	7
3. Technical Data	8
3.1. Housing dimensions	9
3.2. Connection Diagram	10
3.3. Complementary Products	10
3.4. Layout	11
3.5. Control Panel	12
3.6. Scope of Delivery	12
4. Transport and Storage	12
4.1. Transport	12
4.2. Storage	12
5. Installation and Electrical Connection	13
5.1. Installation	13
5.2. Electrical Connection	13
5.3. Diagnostics	14
6. Overview of Functions	15
6.1. Default Settings	15
6.2. Function Definitions	16
6.3. Menu structure	17
7. Settings	20
7.1. Assistant	20
7.2. Causes for Triggering of Error Indication (display)	21
7.3. Run	21
7.4. Pin function	22
7.5. Windows-Teach-in	22
7.5.1. Sample-Teach-in	22
7.5.2. Tolerance	23

7.5.3. Tolerance R/O/Y/G/B/V and H/S/L	23
7.6. Assignment Teach-in	24
7.7. NO/NC Output Function	24
7.8. NPN PNP	24
7.9. On-Delay	25
7.10. Off-Delay	25
7.11. Impulse	26
7.12. Switching Thresholds	26
7.12.1. Thresholds in the Detection operating mode	27
7.12.2. Thresholds In the Assignment operating mode	28
7.13. Error or Contamination Output	28
7.14. Emitted Light or Trigger Input	28
7.15. External Teach-in Input	29
7.16. Display	29
7.17. Expert Menu	30
7.18. Operating mode	30
7.19. Filter	31
7.20. Emitted Light	31
7.21. Test Input	32
7.22. Interface	32
7.23. Language	33
7.24. Info	33
7.25. Reset	33
7.26. Password	34
8. Interfaces	35
8.1. RS-232	35
8.2. IO-Link	35
9. Maintenance Instructions	35
10. Proper Disposal	36
11. Exclusion of Liability	36
12. Appendix	37
12.1. Index of Abbreviations	37
12.2. Frequently Asked Questions (FAQ)	38
12.3. Change Index, Operating Instructions	39
12.4. EU Declaration of Conformity	39

1. General

1.1. Information Concerning these Instructions

- These instructions apply to the product with ID code P1XF001.
- They make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Local accident prevention regulations and national work safety regulations must be complied with as well.



NOTE!

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

1.2. Explanations of Symbols

- Safety precautions and warnings are emphasized by means of symbols and attention-getting words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.
- The safety precautions and warnings are laid out in accordance with the following principle:



ATTENTION-GETTING WORD!

Type and Source of Danger!

Possible consequences in the event that the hazard is disregarded.

– Measures for averting the hazard.

The meanings of the attention-getting words, as well as the scope of the associated hazards, are listed below:



DANGER!

This word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



WARNING!

This word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



CAUTION!

This word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



ATTENTION!

This word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.

**NOTE!**

A note draws attention to useful tips and suggestions, as well as information regarding efficient, error-free use.

1.3. Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art and applicable standards and guidelines. Subject to change without notice.
- wenglor excludes all liability in the event of:
 - Non-compliance with the instructions
 - Use of the product for purposes other than those intended
 - Use by untrained personnel
 - Use of unapproved replacement parts
 - Unapproved modification of products

1.4. Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

2. For Your Safety

2.1. Use for Intended Purpose

The spectral composition of the colors of objects can be measured and analyzed with the P1XF001 6-band Multi-Spectral Sensor. Innovative color chip technology divides the selected color spectrum into six spectral ranges (ROYGBV color space) with separately adjustable tolerance ranges. In combination with glass fiber-optic cables, the sensor adapts itself to the specific requirements of any given application and can be operated in the scanning as well as the through-beam mode. The Color Sensor is equipped with twelve switching outputs and integrated LED technology, which automatically ensures ideal adjustment of light intensity. Sensor settings can be selected directly at the OLED display, via the RS-232 port or via the IO-Link interface.

This product can be used in the following industry sectors:

- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- Clothing industry
- Plastics industry
- Consumer goods industry
- Paper industry
- Electronics industry
- Glass industry
- Printing industry

2.2. Use for Other than the Intended Purpose

- Not a safety component in accordance with the EC machinery directive.
- The product is not suitable for use in potentially explosive atmospheres.
- Only accessories supplied or approved by wenglor may be used with the product.



DANGER!

Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

– Observe instructions regarding use for intended purpose.



CAUTION!

Danger of burns!

Some housing components heat up to 25 K above ambient temperature.

2.3. Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel must have uninterrupted access to the operating instructions.

 **WARNING!**
Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!
Personal injury and damage to equipment may occur.
– Adequate training and qualification of personnel.

2.4. Modification of Products

 **NOTE!**
Modification of the product is impermissible. Non-observance may result in loss of the CE marking and the guarantee may be rendered null and void.

2.5. General Safety Precautions

 **NOTES!**

- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Read the operating instructions carefully before using the product.
- Protect the sensor against contamination and mechanical influences.
- Installation, initial start-up and maintenance of the product may only be carried out by qualified personnel.
- Not a safety component in accordance with the EU machinery directive

2.6. Laser/LED Warnings

 **WARNING!**
Risk of personal injury in the event of direct contact with the eye!
Personal injury may occur.
– Avoid direct eye contact with the sensor's light beam.

2.7. Approvals and IP Protection



3. Technical Data


Order No.	P1XF001
Technical Data	
Optical Characteristics	
Spectral Sensitivity	450...700 nm
Light Source	White Light
Electrical Characteristics	
Supply Voltage	10...30 V DC
Supply Voltage with IO-Link	18...30 V DC
Current Consumption (U _b = 24 V)	~ 260 mA
Switching Frequency	2 kHz
Switching Outputs	12
Response Time	~ 500 μs × filter
Switching Output Voltage Drop	1,5 V
PNP Switching Output/Switching Current	100 mA
Short Circuit Protection	yes
Reverse Polarity Protection	yes
Overload Protection	yes
Interface	RS-232/IO-Link
IO-Link-Version	1.1
Protection Class	III
Mechanical Characteristics	
Temperature Range	-25...60 °C
Adjustment	Teach-in
Degree of Protection	IP67
Connection	M12×1, 4+8-pin
DIN-Rail mounting	35 mm
Function	
Selectable menu language	yes
Output function	
PNP-NO/NC switchable	yes
NO/NC switchable	yes
RS-232 Interface	yes
Error Output	yes
Contamination Output	yes



NOTES!


The warm-up phase takes approx. 30 minutes.

3.1. Housing dimensions

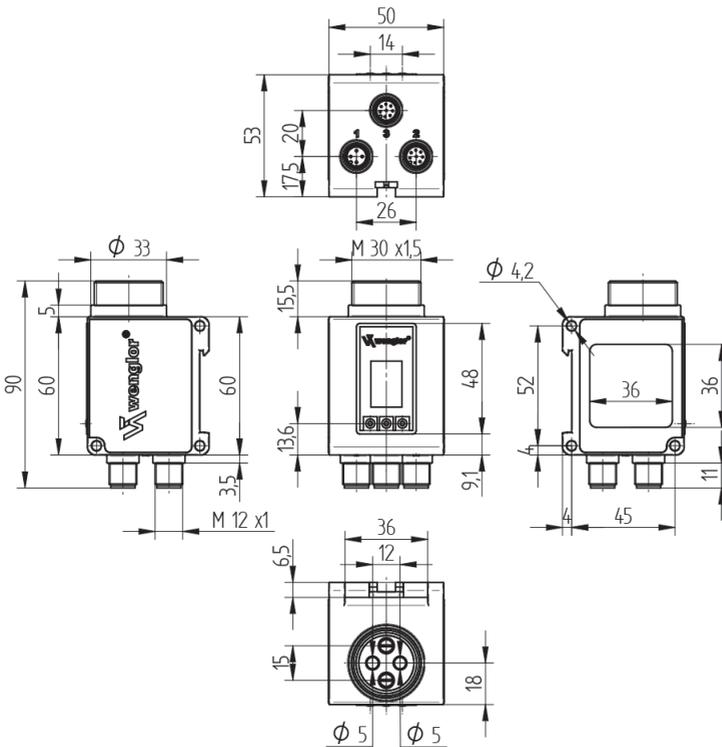

3.2. Connection Diagram

Even if more than one plug is connected, only one source of supply voltage may be used.

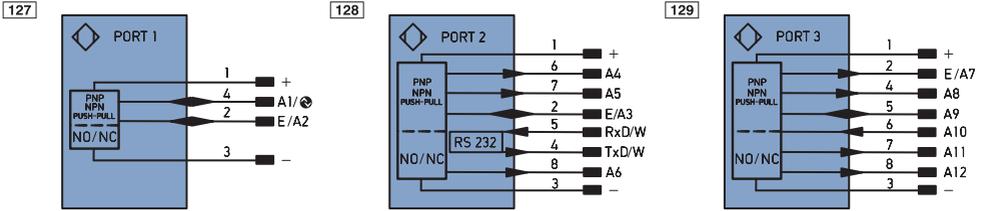

Legend

+	Supply Voltage +
-	Supply Voltage 0 V
~	Supply Voltage (AC Voltage)
A	Switching Output (NO)
Ā	Switching Output (NC)
V	Contamination/Error Output (NO)
∇	Contamination/Error Output (NC)
E	Input (analog or digital)
T	Teach Input
Z	Time Delay (activation)
S	Shielding
RxD	Interface Receive Path
TxD	Interface Send Path
RDY	Ready
GND	Ground
CL	Clock
E/A	Output/Input programmable
	IO-Link
PoE	Power over Ethernet
IN	Safety Input
QSSD	Safety Output
Signal	Signal Output
Bl_D +/-	Ethernet Gigabit bidirect. data line (A-D)
EN0RS422	Encoder 0-pulse 0-0 (TTL)

PT	Platinum measuring resistor
nc	not connected
U	Test Input
Ū	Test Input inverted
W	Trigger Input
O	Analog Output
O-	Ground for the Analog Output
BZ	Block Discharge
AwV	Valve Output
a	Valve Control Output +
b	Valve Control Output 0 V
SY	Synchronization
E+	Receiver-Line
S+	Emitter-Line
≡	Grounding
SnR	Switching Distance Reduction
Rx +/-	Ethernet Receive Path
Tx +/-	Ethernet Send Path
Bus	Interfaces-Bus A(+)/B(-)
La	Emitted Light disengageable
Mag	Magnet activation
RES	Input confirmation
EDM	Contactor Monitoring
ENARS422	Encoder A/Ā (TTL)
ENBR5422	Encoder B/B̄ (TTL)

ENa	Encoder A
ENb	Encoder B
AMIN	Digital output MIN
AMAX	Digital output MAX
AOK	Digital output OK
SY In	Synchronization In
SY OUT	Synchronization OUT
OLt	Brightness output
M	Maintenance


Wire Colors according to DIN IEC 757

BK	Black
BN	Brown
RD	Red
OG	Orange
YE	Yellow
GN	Green
BU	Blue
VT	Violet
GY	Grey
WH	White
PK	Pink
GNYE	Green/Yellow

3.3. Complementary Products

wenglor offers Connection Technology for field wiring.

Suiting Connection Technology No.

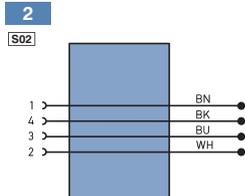

Fiber Optic Cables


IO-Link-Master

Interface Cable S232W3

System overview P1XF

Fiber Optic Cables


FL2002		0,5 m
FL2004		0,5 m
FL2102		0,5 m
FL2104		0,5 m
FL30/50		0,05 m
FL3302		0,5 m
FL3304		1,0 m
FL3402		0,5 m
FL3404		1,0 m
161-256-102		0,5 m
161-256-104		1,0 m
301-251-102		0,5 m
301-251-104		1,0 m
Z96D001		1,0 m

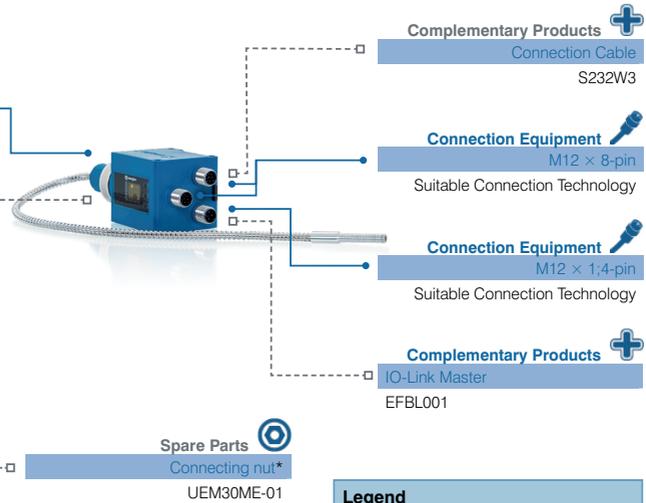


Legend

- Required accessories**
- Optional accessories**
- Included in delivery** *

3.4. Layout

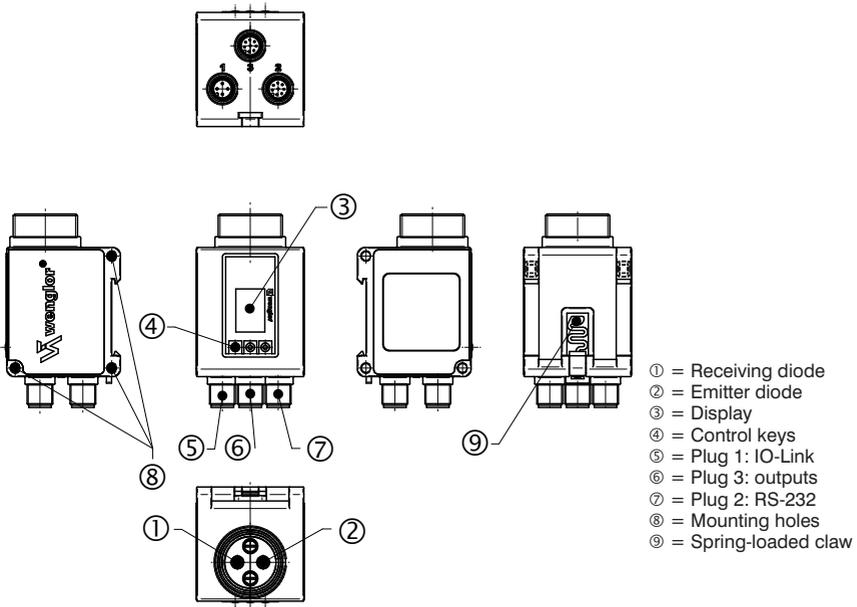

3.5. Control Panel

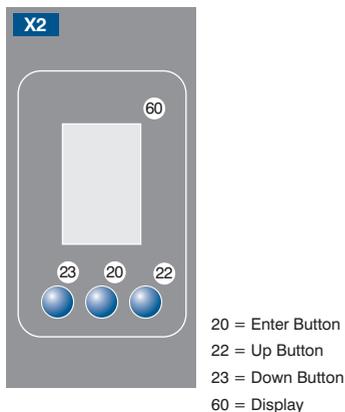

3.6. Scope of Delivery

- P1XF001
- UEM30ME-01
- Quickstart

4. Transport and Storage

4.1. Transport

Upon receipt of shipment, inspect the goods for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device making reference to damage in transit.

4.2. Storage

The following points must be taken into condition with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- Protect the product against mechanical impacts.
- Protect the product against exposure to direct sunlight.



ATTENTION!

Risk of property damage in case of improper storage!

- The product may be damaged.
- Comply with storage instructions.
-


5. Installation and Electrical Connection

5.1. Installation

- Protect the product against contamination during installation (see section „2.5. General Safety Precautions“ on page 7)
- Observe all applicable electrical and mechanical regulations, standards, and safety rules.
- Protect the product against mechanical influences.
- Make sure that the sensor is mounted in a mechanically secure fashion.
- The use of corresponding end brackets is recommended for mounting to DIN rails.
- In order to avoid damaging the LED lens, always connect a fiber-optic cable or attach the rubber protector.

Attaching Glass Fiber-Optic Cables

- Remove the protective cap from the sensor before attaching fiber-optic cables.
- Protect fiber-optic cables from mechanical influences!

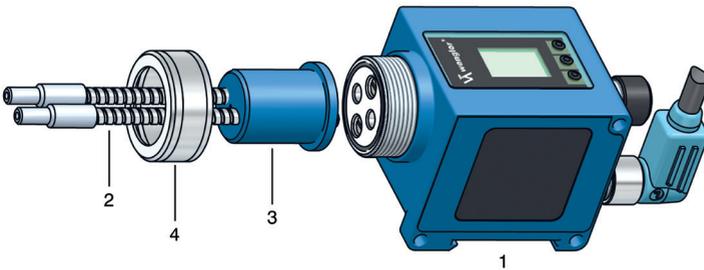

1 Color Sensor
2 wenglor® Fiber Optic

3 adapter No. 1
4 Sleeve Nut



ATTENTION!

Risk of property damage in case of improper installation!

The product may be damaged.
– Comply with installation instructions.

5.2. Electrical Connection

- Connect the sensor to 10 ... 30 V DC at plug no. 1 and/or 2 and/or 3, depending on which outputs are required (see „3.2. Connection Diagram“ on page 10)
- Even if more than one plug is connected, only one source of supply voltage may be used.

5.3. Diagnostics

Conduct in case of fault:



NOTE!

- Shut down the machine.
- With the help of the diagnostics information, analyze and eliminate the cause of error.
- If the error cannot be eliminated, please contact wenglor's support department.
- Do not operate in case of indeterminate malfunctioning.
- The machine must be shut down if the error cannot be unequivocally clarified or reliably eliminated.



DANGER!

Risk of personal injury or property damage in case of non-compliance!

The system's safety function is disabled. Personal injury and damage to equipment.
– Conduct in case of fault as specified.

6. Overview of Functions

6.1. Default Settings

		P1XF001
Pin function	A1	Switching Output
	E/A2	Switching Output
	E/A3	Switching Output
	A4	Switching Output
	A5	Switching Output
	A6	Switching Output
	E/A7	Switching Output
	A8	Switching Output
	A9	Switching Output
	A10	Switching Output
	A11	Switching Output
	A12	Switching Output
Outputs	Teach mode	Windows-Teach-in
	Tolerance	Middle
	Tolerance R	Middle
	Tolerance O	Middle
	Tolerance Y	Middle
	Tolerance G	Middle
	Tolerance B	Middle
	Tolerance V	Middle
	PNP/NPN/Push-pull	Push-pull
	NO/NC	NO
	On-Delay	0 ms
	On-Delay	0 ms
Impulse	0 ms	
Display	Mode	Digital
	Intensity	Screen saver
Expert menu		off
Operating Mode		Detection ROYGBV
Filter		8
Emitted light		Automatic
Interface	Baud rate	38400
Language		English
Password	Activate	Off
	Change	0

6.2. Function Definitions

Name	Function	Page
Run	Change to display mode	21
Pin-Function	Selection of pin function	22
Windows-Teach-in	Teach-in with window width (tolerance)	22
Sample-Teach-in	Automatic tolerance adjustment based on a good part or a bad part.	22
Assignment Teach-in	Teach-in with assignment to the most similar output	22
Tolerance	Window size for window teach-in	23
Output function	Selection of NO or NC	24
Time Delay	Adjustment of on-delay, off-delay and pulse	25
Switching Thresholds	Manual shifting of the thresholds	26
Error or Contamination Output	An output which is activated when the sensor is within an unreliable range	28
Emitted Light	LED intensity setting	31
Trigger Input	Setting for an input to which a trigger signal can be applied	23
External Teach-in Input	Setting for an input at which an output is taught in by applying an electrical signal	29
Display	Display settings	29
Expert menu	Selection of whether a partial or the entire scope of functions will appear at the display	30
Operating Mode	Selection of the "Detection" or the "Assignment" mode	30
Filter	Selection of the number of values used by the sensor to generate a mean value	31
Test Input	For checking to ensure that the outputs are correctly connected	32
Interface	Baud rate setting	32
Language	User language selection	33
Info	Information regarding the device	33
Reset	Restoration of default settings	33
Password	Changing the password and disabling the display	34

6.3. Menu structure

- Connect the sensor to the supply voltage. After initialization the sensor shows the indication screen and is ready for operation. During the first commissioning and after a reset you can first of all select the menu language by simply pressing a button (see „7.23. Language“ on page 33)
- Switch to the configuration menu by pressing any key.



NOTE!

If no setting is made in the configuration setting for a duration of 30 s, the sensor automatically jumps back into the display view. By pressing the button once again, the sensor jumps back to the menu view used last. Settings made are adapted when quitting the configuration menu.

The keys are used for navigation, and for configuring settings. The functions of the navigation keys vary from menu to menu. The functions of the keys appear in the display as follows:

- ▲ : Navigate up.
- ▼ : Navigate down.
- ◀ | ▶ : Selection is acknowledged with the enter key.
- ◀ Back: One level up in the menu.
- ⏪ Run: Change to the display mode




ATTENTION!

Risk of property damage if sharp objects are used!


The keys may be damaged.
– Do not use sharp objects in order to enter settings.

The sensor configuration menu is set-up as follows:

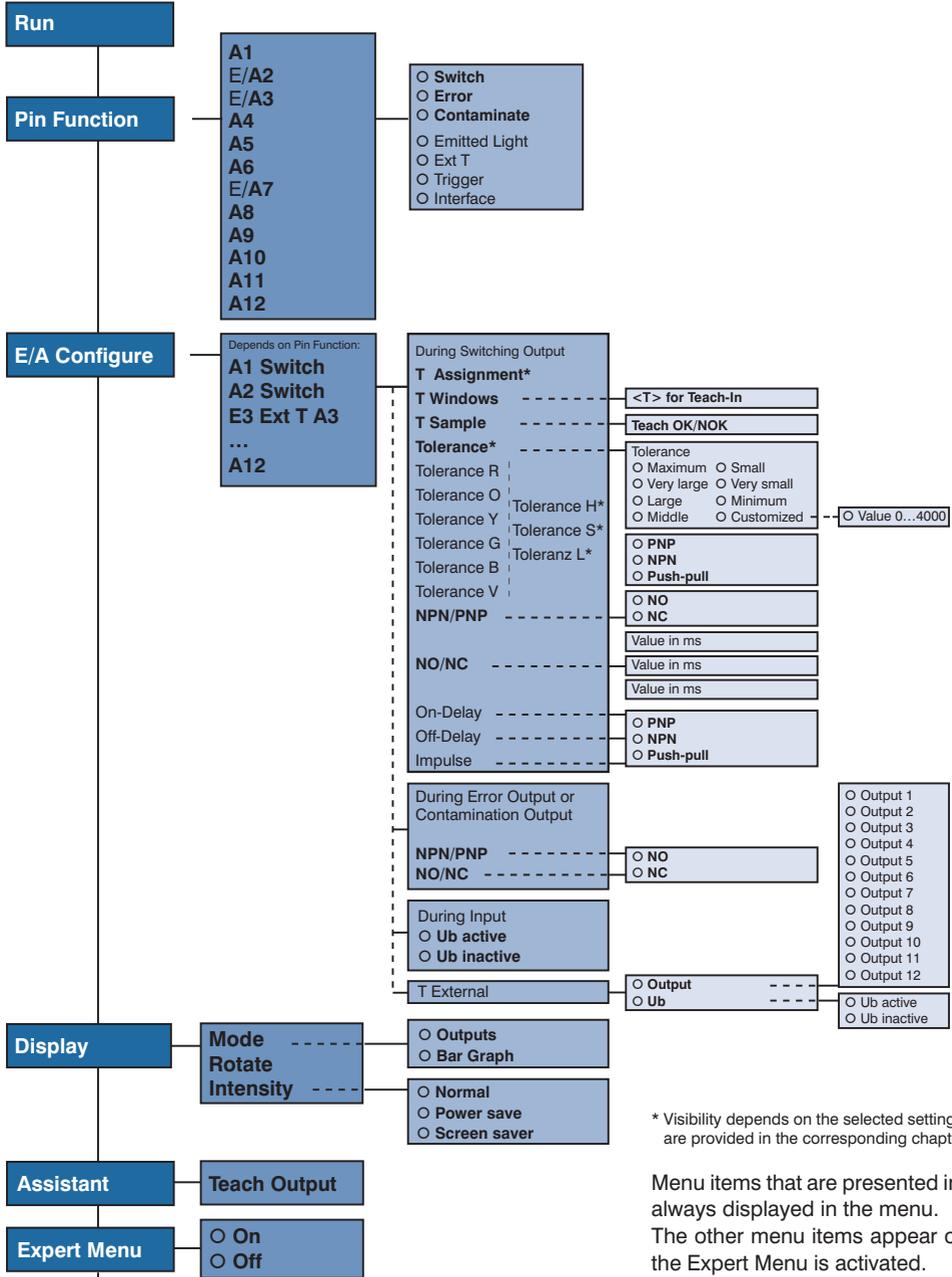

* Visibility depends on the selected settings (details are provided in the corresponding chapter)

Menu items that are presented in bold are always displayed in the menu. The other menu items appear only when the Expert Menu is activated.

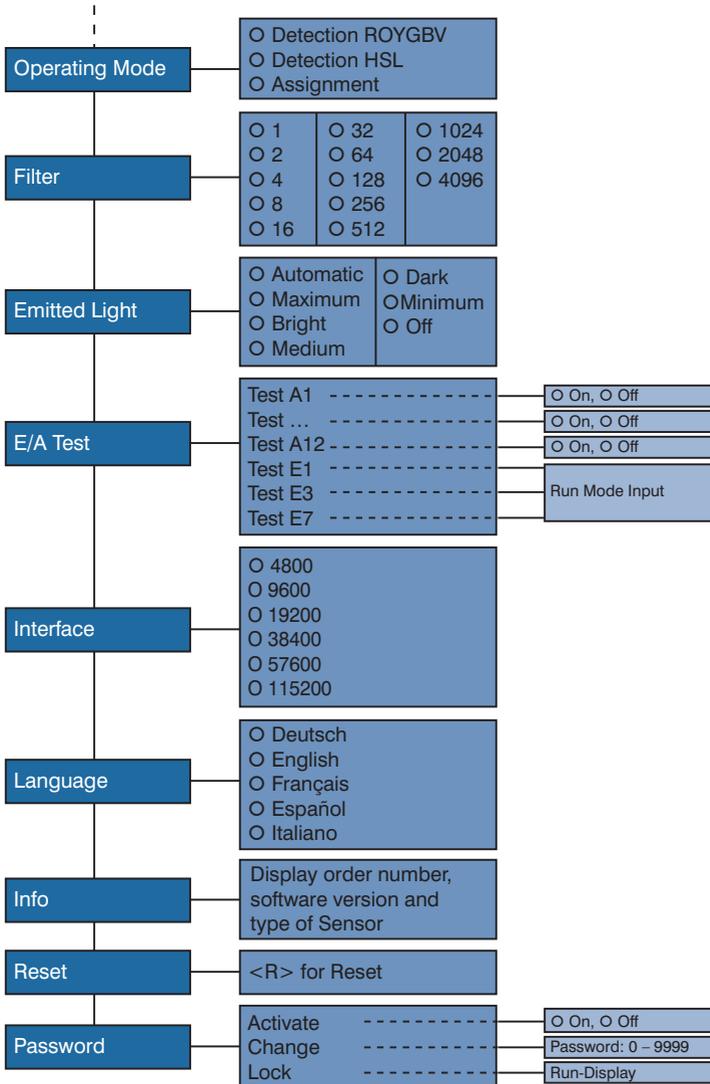


7. Settings

7.1. Assistant

If you use the assistant, you are provided with the following help for teaching in object colors:

<p>Select output</p> <ul style="list-style-type: none"> <input type="radio"/> A1 ... <input type="radio"/> A12 ▶ Weiter ◀ Back ◀◀ Exit 	<p>▲ ↕ ▼</p>	<p>Here, you can select an output to which a color is to be taught-in.</p>
<p>Align lightspot on color</p> <ul style="list-style-type: none"> <input type="radio"/> Teach-In ◀ Back ◀◀ Exit 	<p>▲ ↕ ▼</p>	<p>Align your object within the working range and select Teach-in. Afterwards, you are shown a message informing you whether the Teach-in was successful.</p>
<p>Does the Sensor switch safely?</p> <p><Indicate Ax></p> <ul style="list-style-type: none"> <input type="radio"/> Yes <input type="radio"/> No <input type="radio"/> Sample Teach-in ◀ Back ◀◀ Exit 	<p>▲ ↕ ▼</p>	<p>Select <Indicate Ax> in order to be able to check in the OLED display whether the taught-in output switches safely to the taught-in color. If the output doesn't switch reliably, you can teach-in the color all over again or adjust the tolerance automatically by teaching in a sample.</p>
<p>Align the spot to a OK or NOK sample and execute the appropriate Teach-in procedure:</p> <ul style="list-style-type: none"> <input type="radio"/> OK Sample Teach-in <input type="radio"/> NOK Sample Teach-in ◀ Back ◀◀ Exit 	<p>▲ ↕ ▼</p>	<p>The tolerance is automatically increased in the case of a OK sample, and decreased for a NOK sample.</p>
<p>Would you like to teach in another output?</p>	<p>Y N ◀</p>	<p>Select "Yes" to teach in another color to another output. Select "No" to exit the assistant.</p>

7.2. Causes for Triggering of Error Indication (display)

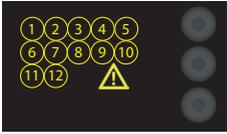

- Not enough light is reflected.
- Very small objects, or objects which do not reflect well, are located within the working range.
- Incorrect installation
- Object is outside of the working range.

7.3. Run

Sensor switches to display mode.

Set pin function E/A with corresponding condition. If E/A is not displayed, it is deactivated in the pin function menu item.



Legend Status-LEDs:

Meaning	Condition 1	Condition 2	Condition 3	Condition 4
Switching Output	① Switched	① Not switched	–	–
Error Output	✓ Ok	⚠ No signal	–	–
Contamination Output	✓ Ok	☀ Signal too low	–	–
Switch off emitted light	⏻ Emitted Light on	⏻ Emitted Light off	–	–
Teach-In Input	ⓘ Active	ⓘ Inactive	–	–
Trigger Input	☀ Active	☀ Inactive	–	–
Signal Strength	✓ Ok	☀ Signal too low	☀ Signal too high	⚠ No signal
temperature	✓ Ok	❄ temperature too low	☀ temperature too high	–

7.4. Pin function

The Pin function is used to determine the function of pins A1, E/A2, E/A3, A4, A5, A6, E/A7, A8, A9, A10, A11 and/or A12 since the pins may be used for different functions.

Function	Description
Ax	Configuration of Pin A1, 4, 5, 6, 8, 9, 10, 11 and/or 12
<ul style="list-style-type: none"> ○ Deactivated ○ Switch ○ Error ○ Contamination ◀ Back ◀◀ Run 	<p>Deactivated: Deactivation of the output</p> <p>Switch: Switching Output</p> <p>Error: Error Output</p> <p>Contamination: Contamination Output</p>
E/Ax	Configuration of Pin E/A2, 3 and/or 7
<ul style="list-style-type: none"> ○ Deactivated ○ Switch ○ Error ○ Contamination ○ Emitted Light ○ T Extern ○ Trigger ◀ Back ◀◀ Run 	<p>Deactivated: Deactivation of the output</p> <p>Switch: Switching Output</p> <p>Error: Error Output</p> <p>Contamination: Contamination Output</p> <p>Emitted Light: Input for switching on/off the emitted light</p> <p>T Extern: Teach input for Ax</p> <p>Trigger: Input for sensor triggering</p>

7.5. Windows-Teach-in

Function	Description
T Windows	Configuration of Pin A1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11 or 12
<ul style="list-style-type: none"> <T> for Teach-in 	<p>Window teach-in procedure:</p> <ol style="list-style-type: none"> 1) Align the spot to the background (if there is one) or the object. 2) Press the "T" key. → The switching points are taught in. <p> NOTE!</p> <ul style="list-style-type: none"> • T sample: additional teach-in of an OK or an NOK sample part in order to adjust tolerances. • Window width can be reduced or enlarged in the tolerance menu.

7.5.1. Sample-Teach-in

T Sample	Description
<ul style="list-style-type: none"> Teach OK/NOK 	<p>Sample teach</p> <p>Sample teach-in procedure:</p> <ol style="list-style-type: none"> 1) Teach in an OK sample. <ul style="list-style-type: none"> • Align the spot to the object. • Press the "OK" key. → The tolerance is increased. 2) Teach in an NOK sample <ul style="list-style-type: none"> • Align the spot to the object. • Press the "NOK" key. → The tolerance is decreased.

7.5.2. Tolerance



NOTE!

The menu item is only visible if the expert menu is set to “off”.

Function	Description
Tolerance	Changing tolerance
<ul style="list-style-type: none"> ○ Maximum ○ Very large ○ Large ○ Middle ○ Small ○ Very small ○ Minimum ◀ Back ◀◀ Run 	<p>Maximum: Tolerance is set to a maximum value.</p> <p>Very large: Tolerance is set to a very large value.</p> <p>Large: Tolerance is set to a large value.</p> <p>Middle: Tolerance is set to a medium value.</p> <p>Small: Tolerance is set to a small value.</p> <p>Minimum: Tolerance is set to a very small value.</p> <p>Minimal: Tolerance is set to a minimum value.</p>

7.5.3. Tolerance R/O/Y/G/B/V and H/S/L



NOTE!

The menu item is only visible if the expert menu is “on” and the operating mode is set to “Detection”.

Function	Description
Tolerance	Changing tolerance
<ul style="list-style-type: none"> ○ Maximum ○ Very large ○ Large ○ Middle ○ Small ○ Very small ○ Minimum ○ Customized ◀ Back ◀◀ Run 	<p>Maximum: Tolerance is set to a maximum value.</p> <p>Very large: Tolerance is set to a very large value.</p> <p>Large: Tolerance is set to a large value.</p> <p>Middle: Tolerance is set to a medium value.</p> <p>Small: Tolerance is set to a small value.</p> <p>Very small: Tolerance is set to a very small value.</p> <p>Minimum: Tolerance is set to a minimum value.</p> <p>Customized: By pressing the “+”, tolerance can be increased. By pressing the “-”, tolerance can be decreased. Keep the button pressed to achieve larger jumps in value.</p>

7.6. Assignment Teach-in



NOTE!

The menu item is only visible if the operating mode is set to "Assignment".

Function	Description
T Assignment	Assignment Teach-In
<T> for Teach-in T	Teach-In Assignment-Teach-In process: 1) Adjust light spot to the object color. 2) Press "T" button. -> The object color is taught in and allocated to the appropriate output.

An explanation of the "Assignment" operating mode is included in section „7.18. Operating mode“ on page 30.


7.7. NO/NC Output Function

Function	Description
NO/NC	Output configuration
○ NO	NO: Normally open.
○ NC	The output closes as soon as an object reaches the switching point.
◀ Back	NC: Normally closed.
◀◀ Run	The output opens as soon as an object reaches the switching point.


7.8. NPN PNP

Function	Description
NPN/PNP	Output configuration
○ PNP	PNP: A load or the evaluation device is connected between the negative pole (supply) and the output. If switched, the output is connected with the positive pole via an electric switch.
○ NPN	NPN: A load or the evaluation device is connected between the positive pole (supply) and the output. If the sensor switches, the output is connected with the negative pole via an electric switch.
○ Push-pull	Push-pull: Push-pull output.
◀ Back	Acts like an electronic switch which optionally switches the output to the positive pole or the negative pole.
◀◀ Run	

7.9. On-Delay

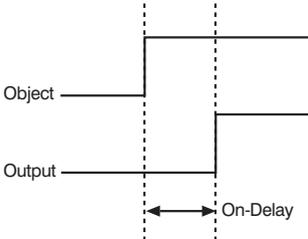
Function	Description
On-Delay	Setting of On-Delay
A1 Switch On-Delay 10 ms	<p>By pressing the “+” or “-” button, a On-Delay from 0 ms to 10000 ms can be set. The On-Delay is an adjustable extension of the response time.</p> <p>Keep the button pressed to achieve larger jumps in value.</p> 

7.10. Off-Delay

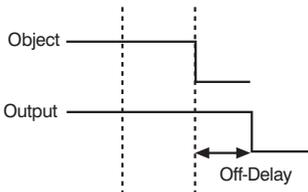Function	Description
Off-Delay	Setting of Off-Delay
A1 Switch Off-Delay 10 ms	<p>By pressing the “+” or “-” button, a Off-Delay from 0 ms to 10000 ms can be set. The Off-Delay is an adjustable extension of the drop-out time.</p> <p>If an impulse length has been set, no Off-Delay can be set. In this case, the notice “Impulse” will appear in the control panel!</p> <p>Keep the button pressed to achieve larger jumps in value.</p> 

7.11. Impulse

Function	Description	
Impulse	Adjusting Impulse Duration	
A1 Schalt Impuls 10 ms	+	The pulse length defines how long the switching state is held. A pulse length of 0 to 10000 ms can be set by pressing the “+” key or the “-” key.
	▶	After the selected pulse duration has elapsed, the output signal is returned to the deactivated state.
	-	

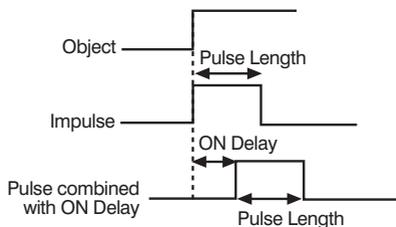


7.12. Switching Thresholds

The switching thresholds can be set manually via IO-Link or via the RS-232 port, for example with the help of wenglor's wTeach configuration software. The software can be downloaded free of charge at: www.wenglor.com → Product World → Search (Enter the product number) → Download


7.12.1. Thresholds in the Detection operating mode

In the “Detection” operating mode, an upper and a lower threshold can be set for each individual hue, for saturation or for brightness. And thus a separate window width is possible for each channel.

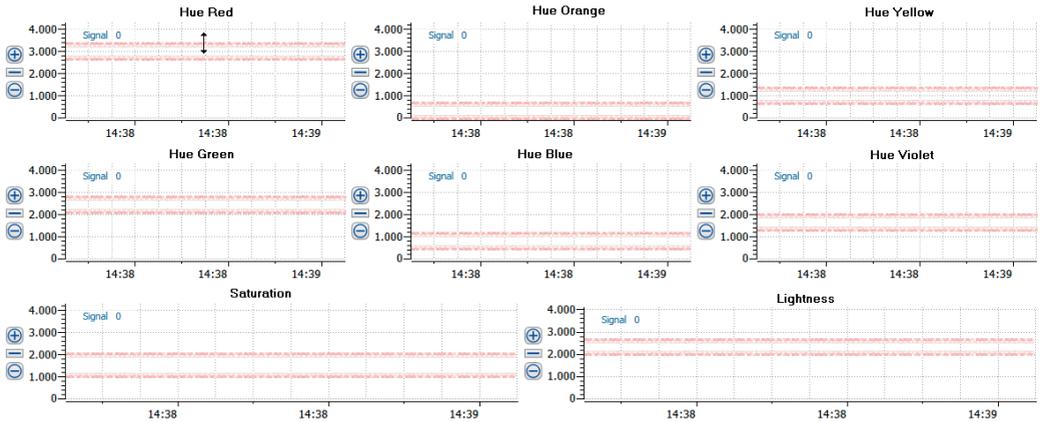

Switching points:

The following switching points are calculated on the basis of the measured value during Teach-In:

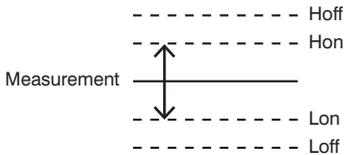

Hoff = Hon + Hysteresis

Hon = Hue value + window size

Lon = Hue value – window size (this result can easily become negative)

Loff = Lon – Hysteresis (this result can easily become negative)

Only the Hon and Lon threshold values can be changed with wTeach2 software. The other values are calculated on the basis of hysteresis, although hysteresis is not a fixed value itself but rather a calculated value as well.

7.12.2. Thresholds In the Assignment operating mode

In the “Assignment” operating mode, a threshold can be set for each individual hue:

- Red
- Orange
- Yellow
- Green
- Blue
- Violet

7.13. Error or Contamination Output

When the pin is configured as an error or a contamination output, the following functions can be selected:

Function	Description
A1 Error (example)	Error output or contamination output
NPN/PNP	NPN/PNP: Output configuration
NO/NC	NO/NC: Output configuration
◀ Back	
◀◀ Run	

Explanations concerning “NPN/PNP” are included in section „7.8. NPN PNP“ on page 24. Explanations concerning “NO/NC” are included in section „7.7. NO/NC Output Function“ on page 24.

7.14. Emitted Light or Trigger Input

When the pin is set up, for example, as an input for shutting down emitted light, you can select whether the input is Ub active or Ub inactive:

Function	Description
E3 Emitted Light (example)	Setting E2, E3 and/or E7 input
<input type="radio"/> Ub active	Ub active: The input is activated when operating voltage (Ub) is on.
<input type="radio"/> Ub inactive	Ub inactive: The input is activated when operating voltage is off.
◀ Back	
◀◀ Run	

An operation is triggered by applying an edge to the input (i. e. by changing the electrical signal from negative to positive or vice versa).

7.15. External Teach-in Input

When the pin is set up as an input for external teach-in, you can select whether the input is Ub active or Ub inactive and which output will be taught in externally:

Function	Description
E3 External Teach-in (example)	Setting E2, E3 and/or E7 input
<ul style="list-style-type: none"> ○ Ub ○ Output ◀ Back ◀◀ Run 	<p>Ub active: The input is activated when operating voltage (Ub) is on.</p> <p>Ub inactive: The input is activated when operating voltage is off.</p> <p>Output: When the input is activated, the selected output is taught in.</p>

Depending on the selected operating mode, external teach-in executes either a window or an assignment teach-in operation. An operation is triggered by applying an edge to the input (i. e. by changing the electrical signal from negative to positive or vice versa).

7.16. Display

Function	Description
Display	Adjusting the display device
<ul style="list-style-type: none"> ○ Rotate ○ Intensity ○ Mode ◀ Back ◀◀ Run 	<p>Rotate: Rotate display by 180°. The display is rotated by 180° by pressing the key. The rotation is canceled by pressing this key again.</p> <p>Intensity: Set the display intensity</p> <p>Mode: Select display mode</p>
Intensity	Set the display intensity
<ul style="list-style-type: none"> ○ Normal ○ Power save ○ Screen saver ◀ Back ◀◀ Run 	<p>Normal: The intensity of the display is set to a normal value.</p> <p>Power save: The display switches off after one minute without a button being pressed and automatically switches back on when a button is pressed.</p> <p>Screen saver: The colors of the display are inverted every minute.</p>
Mode	Select display mode
<ul style="list-style-type: none"> ○ Digital ○ Bar Graph ◀ Back ◀◀ Run 	<p>Digital: The condition of each output is indicated on the display.</p> <p>Bar Graph: The ROYGBV color spaces / shares of the object are indicated in a bar graph.</p>

7.17. Expert Menu

Depending on whether the expert menu is “on” or “off”, different menu items and sub-items appear in the menu. The expert menu is disabled in the default settings. Thus, the menu is shorter and easier to use. If the available menu items are not sufficient for the application solution, the expert menu can be enabled and the entire scope of sensor functions can be used.

Function	Description
Expert Menu	Enable or disable expert menu
○ Off	Off: The expert menu is enabled and all menu items are displayed. On: The expert menu is disabled and only a few menu items are displayed..
○ On	
◀ Back	
◀◀ Run	

7.18. Operating mode



NOTE!

The menu item is only visible if the expert menu is set to “on”.

Function	Description
Operating mode	Select operating mode
○ Detection ROYGBV	Detection: In the “Detection” operating mode, color windows are taught in to an output. The sensor detects the taught-in colors within a certain range if they are within the tolerance (see „7.5.2. Tolerance“ on page 23). Which detection mode is right for the respective application depends on the objects and must be determined accordingly. Basically, the ROYGBV mode is for flexible, all-around tasks and the HSL mode is for the detection if fine color nuances under ideal conditions. Assignment: In the “Assignment” operating mode, one color each can be taught in and assigned to the outputs. The sensor evaluates the current color value and assigns it to the most similar color of the corresponding output. Thus, one of the outputs is always enabled in this operating mode. Thus, the reliable assignment of all object colors is possible.
○ Detection HSL	
○ Assignment	
◀ Back	
◀◀ Run	

7.19. Filter



NOTE!

The menu item is only visible if Expert Menu “On” has been set.

Function	Description
Filter	Number of values for averaging.
<ul style="list-style-type: none"> <input type="radio"/> 4 <input type="radio"/> 8 <input type="radio"/> 16 <input type="radio"/> 32 <input type="radio"/> 64 <input type="radio"/> 128 <input type="radio"/> 256 <input type="radio"/> 512 <input type="radio"/> 1024 <input type="radio"/> 2048 <input type="radio"/> 4096 ◀ Back ◀◀ Run 	<p>The filter (filter size) is the number of measured values the sensor uses for averaging. The larger the filter, the slower the response time of the sensor.</p>

7.20. Emitted Light

In the “Emitted Light” menu item, the intensity of the emitted light can be modified or the emitted light can be switched off.



NOTE!

The menu item is only visible if the expert menu is set to “on”.

Function	Description
Emitted Light	Set emitted light
<ul style="list-style-type: none"> <input type="radio"/> Automatic <input type="radio"/> Maximum <input type="radio"/> Bright <input type="radio"/> Medium <input type="radio"/> Darkl <input type="radio"/> Minimum <input type="radio"/> Off ◀ Back ◀◀ Run 	<p>Automatic: Automatically adjustment depending on the received intensity. That function decreases the response time of the sensor.</p> <p>Maximum: Increased signal strength makes it possible to detect dark objects with minimal remission.</p> <p>Minimum: Reduced signal strength makes it possible to better detect the color values of very bright objects.</p> <p>Off: Emitted light is switched off and only extraneous light is evaluated. Luminescent objects can be detected in this way.</p>

7.21. Test Input

This function changes the outputs manually, regardless of the sensor's momentary measured value. This makes it possible to monitor, for example, whether or not outputs are correctly connected to a controller, or if there's a disturbance in the cable which is altering the analog value. It's also possible to test whether or not voltage is being applied to the input pin. The test is ended automatically when the test menu is exited.



NOTE!

The menu item is only visible if Expert Menu "On" has been set. Only the functions for which the pin is set are displayed in each case.

Function	Description
E/A Test	E/A Test of the inputs and outputs
Test A1	Ax test: On: activate output (24 V) Off: deactivate output (0 V) Ex test: Display whether 0 V or 24 V is being applied to input 4.
Test E/A2	
Test ...	
Test A12	
◀ Back	
◀◀ Run	

7.22. Interface



NOTE!

The menu item is only visible if the expert menu is set to "on".

Function	Description
Baud rate	Setting the baud rate
<input type="radio"/> 4800	4800: 4800 Baud
<input type="radio"/> 9600	9600: 9600 Baud
<input type="radio"/> 19200	19200: 9200 Baud
<input type="radio"/> 38400	38400: 38400 Baud (standard setting)
<input type="radio"/> 57600	57600: 57600 Baud
<input type="radio"/> 115200	115200: 115200 Baud
◀ Back	
◀◀ Run	

7.23. Language

The menu language can be changed in the menu item “Language”. The user is automatically prompted for his desired language at initial operation and after each reset..



NOTE!

The menu item is only visible if the expert menu is set to “on”.

Function	Description
Language	Set menu language
<ul style="list-style-type: none"> ○ Deutsch ○ English ○ Francais ○ Espanol ○ Italiano ◀ Back ◀◀ Run 	The menu appears in the selected language immediately after selection.

7.24. Info



NOTE!

The menu item is only visible if Expert Menu “On” has been set.

The following information about the Sensor is displayed in the “Info” menu item.

Order number
Software version
Serial number

7.25. Reset

The Sensor setting can be reset to the delivery state in the menu item “Reset”.

Function	Description
Reset	delivery state
<ul style="list-style-type: none"> Reset to push <R> for Reset 	<p>R</p> <p>The Sensor settings that have been made can be reset to the delivery state by pressing the “R” key.</p>

7.26. Password

Password protection prevents against unintended changing of the set data.



NOTE!

The menu item is only visible if the expert menu is set to “on”.

Function	Description
Activating	Activating or Deactivating the Password Function
Password ▲ ○ inactive ▶ ○ active ▼	Password protection can be activated or deactivated with the 5 and 6 keys. When password protection is activated, sensor operation is disabled after supply power has been interrupted and is not enabled again until the password has been correctly entered.
Change	Password Entry for Enabling
Password + Change ▶ 0 -	A password within a range of 1 to 9999 can be selected using the + and – keys. Selection is acknowledged by pressing the enter key.
Lock	Locking the Sensor
Password ▲ Activate ◀ Change ▼ Lock ▼	Disabling the sensor inhibits its operation immediately, if “Activate password” is set to on.



NOTE!

If the password function has been activated, the password must be entered each time supply power is interrupted. After pressing any key, the menu is automatically switched to the password entry mode. After the password has been correctly entered, the entire menu is enabled and the sensor can be operated. The password function is deactivated upon shipment from the factory. It must be assured that the selected password is noted before any changes occur. If the password is forgotten, it has to be overwritten with a master password. The master password can be requested by e-mail from support@wenglor.com.

8. Interfaces

8.1. RS-232

The RS-232 port makes use of the software handshake procedure. All settings can be configured and queried via a computer. RS-232 port terminals RxD (5) and TxD (4) are linked to minus (pin 3), and can be connected to the corresponding terminals at the communication partner.

Technical Data, RS-232 Port

Adjustable baud rate, 8 data bits, no parity, 1 stop bit

Connect the sensor to the PC or the controller as follows using wenglor's S232W3 interface cable:

- Insert the S232W3 interface cable into plug no. 2 directly at the sensor.
- Plug the ZAS89xxx 8-conductor connection cable into the interface cable.
- Connect the 9-pin D-sub plug connector on the S232W3 cable to the serial port, or to the PC or controller via the AB-USB01 USB adapter.



8.2. IO-Link

Process and parameters data can be found at www.wenglor.com in the product's separate download area:

www.wenglor.com → Product World → Search (Enter the product number) → Download

9. Maintenance Instructions



NOTE!

- This wenglor Sensor is maintenance-free.
- It is advisable to clean the lens and the display, and to check the plug connections at regular intervals.
- Do not clean with solvents or cleansers which could damage the device.
- The product must be protected against contamination during initial start-up

10. Proper Disposal

Respectively valid national waste disposal regulations apply to product disposal.

11. Exclusion of Liability

wenglor sensoric GmbH, hereinafter referred to as wenglor, makes explicit reference to the fact that the information contained in these operating instructions may be subject to continuous further development and technical changes. These operating instructions do not imply any guarantee from wenglor with regard to the described procedures or specific product characteristics.

wenglor assumes no liability for printing errors or other inaccuracies contained in these operating instructions, unless wenglor was verifiably aware of such errors at the point in time at which the operating instructions were prepared. Furthermore, wenglor herewith explicitly informs the user that these operating instructions are only a general description of technical procedures whose implementation may not be suitable in all cases as described in this document. Information included in these operating instructions is subject to change without notice. No part of this document may be duplicated or translated into any other languages, regardless of the utilized means, without prior written consent from wenglor sensoric GmbH.

Any and all liability, regardless of legal grounds, is excluded insofar as this is legally permissible. In particular with regard to any material and/or legal defects demonstrated by the software and the hardware, as well as associated documentation and information – especially with regard to correctness, accuracy, absence of third party protective rights and copyrights, timeliness, completeness and/or usability – no liability is assumed except in the event of malice aforethought or intent.

12. Appendix

12.1. Index of Abbreviations

Abbreviation	Meaning
A	Output
E	Input
DC	Direct current
kHz	Kilohertz
LED	Light Emitting Diode
mA	Milliamperes
mm	Millimeters
ms	Milliseconds
NC	Normally closed
NO	Normally Open
NPN	Negative-positive-negative
Nr.	Number
OLED	Organic light emitting display
PNP	Positive-negative-positive
Ub	Operating voltage
V	Volts
z.B.	For example
°C	Degrees Celsius
K	Kelvin

12.2. Frequently Asked Questions (FAQ)

What do I have to do in order to use the sensor in a high-speed application?

The following procedure can be used to increase switching frequency:

- Set the filter to a low value. The higher the filter setting the more values have to be consolidated, thus resulting in slower sensor switching (see „7.19. Filter“ on page 31).

 **NOTE!**
The switching frequency of the sensor itself is higher than that of the display. For this reason, only take the actual switching outputs into consideration.

After completing window teach-in, NOK samples also cause the sensor to switch.

The following options are available:

- **NOK sample teach-in:** automatic tolerance adjustment based on a bad part. The sensor determines the switching threshold automatically based on the sample, so that the NOK sample is excluded from the tolerance range (see „T Sample“ on page 22).
- **Reduce window size (tolerance)** (see „7.5.2. Tolerance“ on page 23 and „7.5.3. Tolerance R/O/Y/G/B/V and H/S/L“)
- **Shift the switching thresholds:** Switching threshold values can be changed manually via the interface, so that the NOK sample is excluded from the window (see „7.12. Switching Thresholds“ on page 26)

How can I detect transparent objects like foils and jars?

No further adjustment to the sensor is required in order to use it in the through-beam mode. It's only necessary to connect fiber-optic cables to the sensor for the through-beam mode.

Which settings are required in order to detect luminescent objects?

Emitted light should be switched off entirely, or almost entirely (see „7.20. Emitted Light“ on page 31).

When is the detection mode suitable, and when the assignment mode?

In the “**assignment**” **teach-in mode**, one color is taught in to each of the outputs. The sensor evaluates the detected color value and allocates it to the respective output with the most similar color.

→ Advisable for distance fluctuations and objects with large color tolerances. However, due to the fact that one output is always switched, it must be assured that the background does not change.

There are two switching points in the case of **window teach-in**. The distance between the two switching points is called the window. The size of the window is defined as window width. The sensor is switched when an object is within the window.

→ This operating mode is well suited for identifying the known object from an unknown sample. Differentiation amongst very fine color nuances is also possible in this operating mode.

12.3. Change Index, Operating Instructions

Version	Date	Description/Change	Associated Software
1.0.0	24.07.15	Initial version of the operating instructions	Software: wTeach2 Firmware: 1.0.6
2.0.0	30.06.16	Changes to the Technical Data	Software: wTeach2 Firmware: 1.0.6
3.0.0	29.03.17	<ul style="list-style-type: none">• Addition of operating mode “detection ROYGBV” (valid from firmware 1.3.1).• Other corrections.	Software: wTeach2 Firmware: 1.3.1

12.4. EU Declaration of Conformity

The EU declaration of conformity can be found on our website at www.wenglor.com in download area.